



FROZEN

Long

FEATURES

Frame: Metal
Diffuser: None
Dimmable: Yes
Dimmer: Not Included
Bulb: Included

BULB

LED 2700K 2 x 18W | 3000 lm

and _____

LED 2700K 3 x 18W | 4500 lm


or _____

LED 3000K 2 x 18W | 3200 lm

and _____

LED 3000K 3 x 18W | 4800 lm

SPECIFICATION SHEET

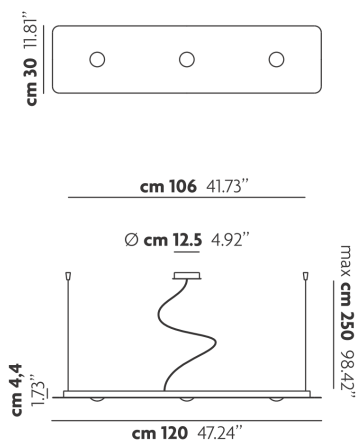

CERTIFICATION



PHOTOMETRIC CURVE

None

FRAME	DIFFUSER	LED COLOUR	CODE
Matt White 9016	None	3000K	149004
Coppery Bronze	None	3000K	149008
Matt White 9016	None	2700K	149011
Coppery Bronze	None	2700K	149012



FROZEN

Square

FEATURES

Frame: Metal
Diffuser: None
Dimmable: Yes
Dimmer: Not Included
Bulb: Included

BULB

LED 2700K 1 x 18W | 1500 lm

and _____

LED 2700K 4 x 18W | 6000 lm

or _____

LED 3000K 1 x 18W | 1600 lm

and _____

LED 3000K 4 x 18W | 6400 lm


CERTIFICATION



PHOTOMETRIC CURVE

None

SPECIFICATION SHEET

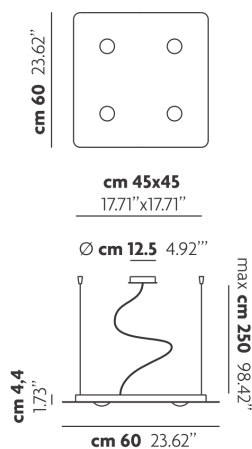

FRAME	DIFFUSER	LED COLOUR	CODE
Matt White 9016	None	Optionally	149009
Coppery Bronze	None	3000K	149010
Matt White 9016	None	2700K	149013
Coppery Bronze	None	2700K	149014

FROZEN SO-SO2

Suspension | Long

220-240V 50/60 Hz

SO **LED** up 2x17W - 3180 lm
3000K down 3x17W - 4770 lm

SO2 **LED** up 2x17W - 2960 lm
2700K down 3x17W - 4440 lm

Disinserire la tensione prima di operare sull'apparecchio.

ISTRUZIONI DI MONTAGGIO

- 1) Rimuovere il coperchio [C] dalla scatola a soffitto [A] svitando il grano [E] (Fig.1 e 2).
- 2) Fissare i 2 decentramenti [L]. Vedere Fig.1 e Fig.3 per i fori a soffitto e l'uso dei decentramenti.
- 3) Fissare la scatola al soffitto [A] attraverso le asole [G].
- 4) Regolare l'altezza della lampada agendo sulle due funi d'acciaio regolando i registri [L] (vedi particolare Fig.3 per l'uso dei registri).
- 5) Eseguire il collegamento elettrico ai morsetti [B]
Nota: il cavo L1 alimenta i led superiori mentre il cavo L2 alimenta i led inferiori.
- 6) Regolare la lunghezza del cavo elettrico attraverso il bloccacavo [D] all'interno della scatola a soffitto (vedi particolare Fig.4 per l'uso del bloccacavo).
- 7) Riposizionare il coperchio [C] alla scatola a soffitto [A] bloccandolo con il grano [E] come indicato (Fig.2).
- 8) Dopo l'installazione della lampada regolare il corretto bilanciamento della struttura [S] agendo sulle due viti [P] con la chiave esagonale fornita in dotazione (vedi Fig.5)

Garanzie

La Studio Italia Design garantisce i suoi prodotti essere privi da difetti di materiale e di lavorazione per la durata di un anno dalla consegna. Durante tale periodo la Studio Italia Design riparerà o sostituirà, a sua discrezione, i prodotti che hanno dato prova di difetto. Questa garanzia non è applicata a danni risultanti dall'incidente, alterazione, manomissione, abuso e negligenza.


Questa garanzia non è applicata alle lampadine, che non sono prodotti fatti dalla Studio Italia Design e fornite dalla Studio Italia Design solo come una comodità.

**STUDIO
ITALIA DESIGN**

www.studioitaliadesign.com / info@studioitaliadesign.com / Via Pialoi, 32, 30020, Marcon, Venezia, ITALY

Italiano

20.07.15_01

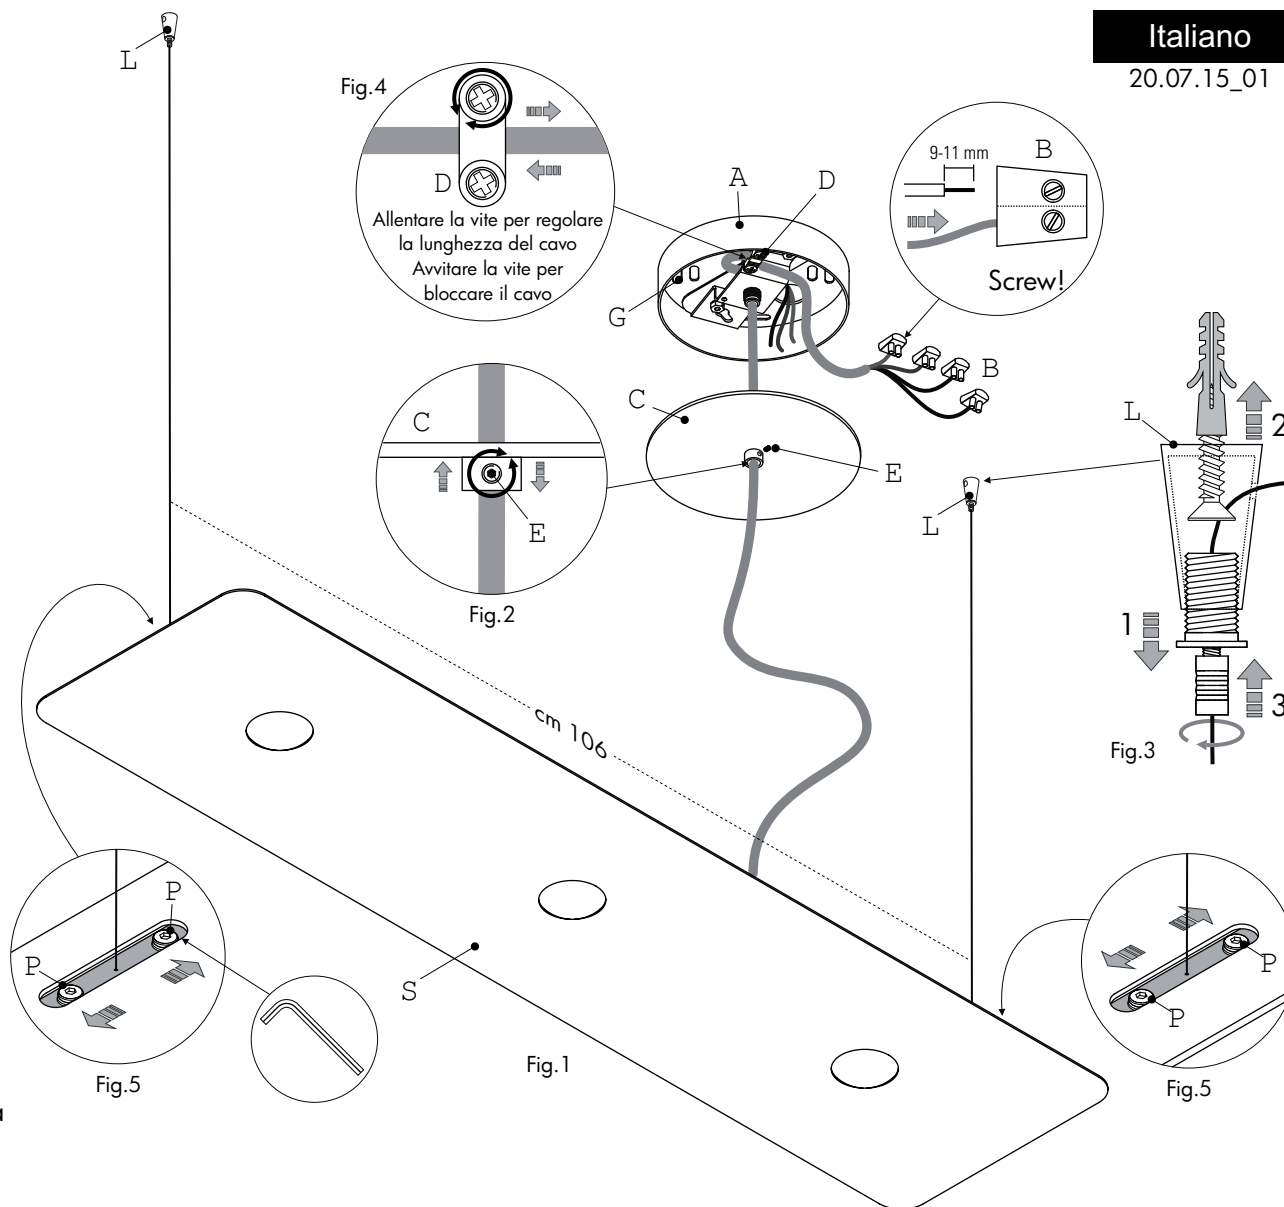

Conservare le istruzioni per una manutenzione futura
Le operazioni indicate devono essere eseguite da personale qualificato



FROZEN SO-SO2

Suspension | Long

220-240V 50/60 Hz


SO **LED** up 2x17W - 3180 lm
3000K down 3x17W - 4770 lm

SO2 **LED** up 2x17W - 2960 lm
2700K down 3x17W - 4440 lm

Turn off the power to the electrical box before beginning installation

MOUNTING INSTRUCTIONS

- 1) Undo the screw grub [E] and separate the ceiling plate [A] from the cover [C] (Fig.1 and 2).
- 2) Fix the two suspension cones [L] to the ceiling. Follow the instructions on Fig.1 and Fig.3 to drill the ceiling and properly install the cones.
- 3) Secure the ceiling plate [A] to the ceiling through the slots [G] using appropriate fasteners.
- 4) Adjust the length of the suspension wires using the terminal blocks [L]. Screw the pin to block the steel wire in the thread-blocking bolt (Fig.3).
- 5) Make the connection of the power supply to the terminal blocks [B] Note: the L1 wire powers the upper led while the L2 wire powers the bottom led.
- 6) Adjust the length of the power cable using the cable grip [D] inside the ceiling plate (see detail on Fig.4).
- 7) Slide the cover [C] over the ceiling plate [A] and secure it in position with the threaded grub [E] (Fig.1)
- 8) Use the supplied hex key on the screws for adjusting the balance of the frame (see Fig.5).

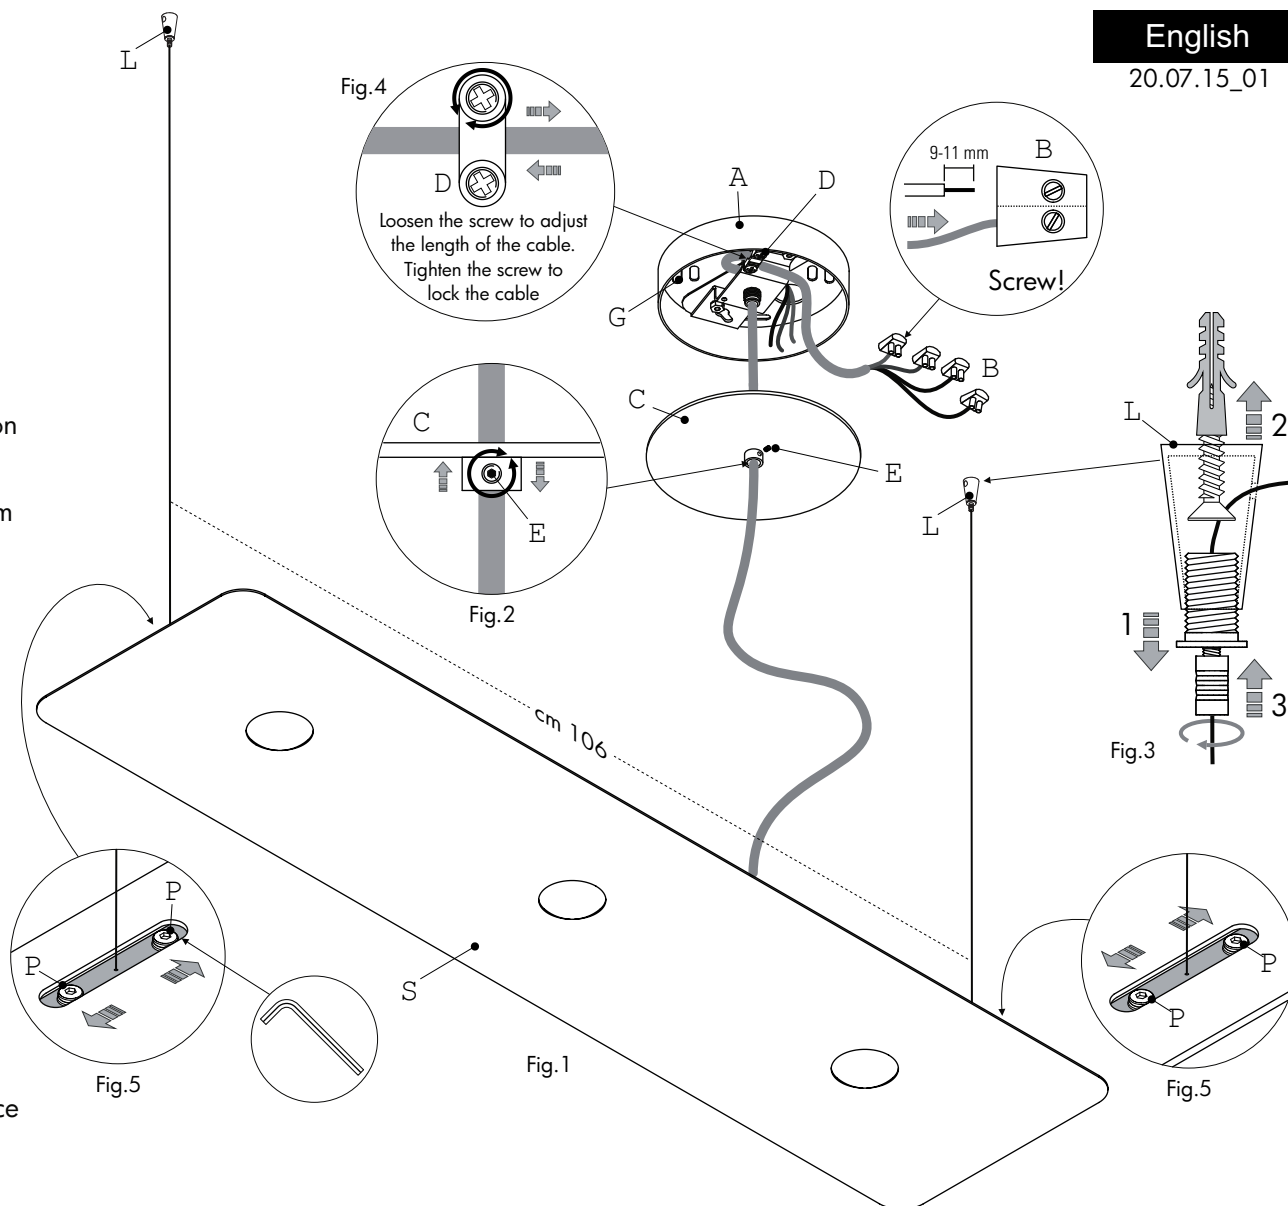

English

20.07.15_01

Warranty

Studio Italia Design warrants its to be free from defects in materials and workmanship for a period of one year date of delivery. During this warranty period Studio Italia Design will repair or replace, at its option, product that are proven to be defective. This warranty does not apply to damages resulting from accidental, alteration, tampering, misuse, negligence or abuse.

This warranty does not apply to light bulbs, which are not products manufactured by Studio Italia Design and supplied by Studio Italia Design only as an accommodation.

**STUDIO
ITALIA DESIGN**

www.studioitaliadesign.com / info@studioitaliadesign.com / Via Pialoi, 32, 30020, Marcon, Venezia, ITALY

**Keep these instructions for future reference
To be installed by a qualified licensed electrician only**

